


## Counter Flashing/Storm Collar for Non-Vent Pipe and Split Leads

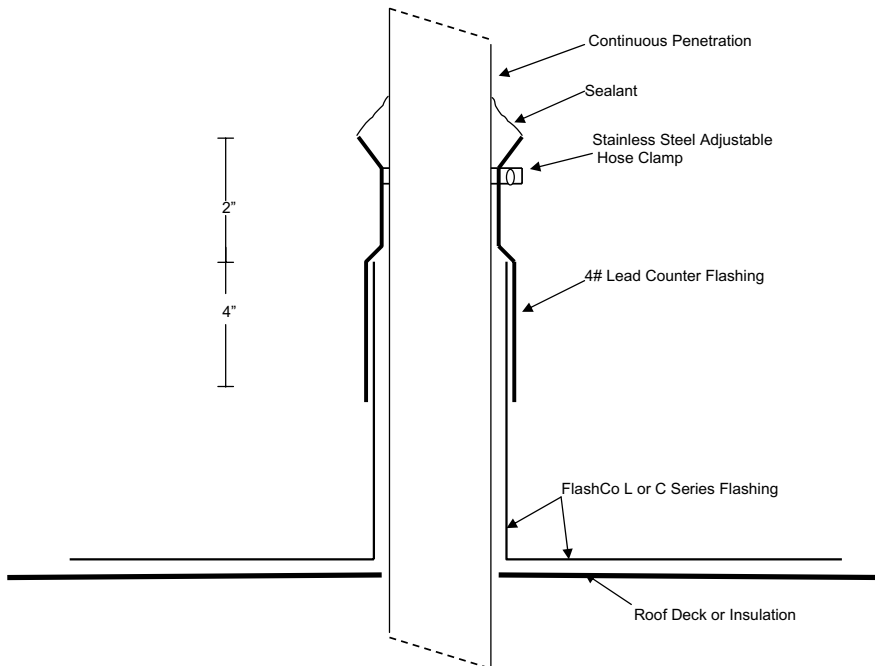

### **Procedures for installing Counter Flashing/Storm Collar.**

- 1) Determine length of lead by measuring the circumference of the penetration and adding 3" for overlapping.
- 2) Wrap 6" wide lead around penetration; 2" above and 4" below top of lead riser.
- 3) Tighten stainless steel hose clamp 1/2" - 1" below top of counter flashing.  
Do not tighten all the way.
- 4) Utilize a screwdriver and flange out the lead at the top of counter flashing.
- 5) Inject polyurethane sealant between top of collar and pipe.
- 6) Complete the tightening of the clamp allowing sealant to bleed out.
- 7) Caulk vertical seam on collar with sealant.
- 8) Counter flashing shall be installed in accordance with the recommendations and specifications of the roofing material manufacturer.